


BOT-W506 Thermostat User Guide

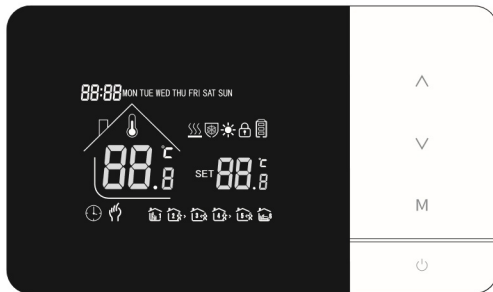


Application

The intelligent thermostat is designed for boilers connected via dry contacts. It controls the boiler's operation by comparing ambient and set temperatures, aiming to regulate room temperature for comfort and energy savings.


Electrical specifications

Equipment power supply	Three AAA batteries
Protection Level	IP20
Temperature sensor	NTC
temperature precision	±0.5
Load current	3A (resistive)
Self - consumption power	less than 170 μ W

 
Installation Steps



1. Pry away the display panel using a screw driver

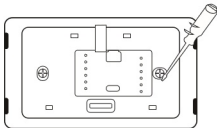


2. Place the backplane' in the installation position
Insert and tighten the screws

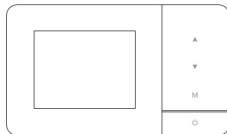


3. Cover the panel.
The installation is complete

Wiring diagram


NO COM NC

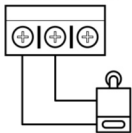



NO COM NC

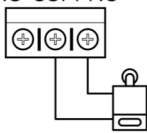

3

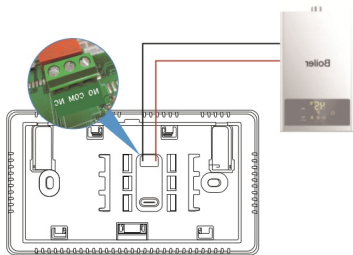

■ Explanation of Equipment Icons

 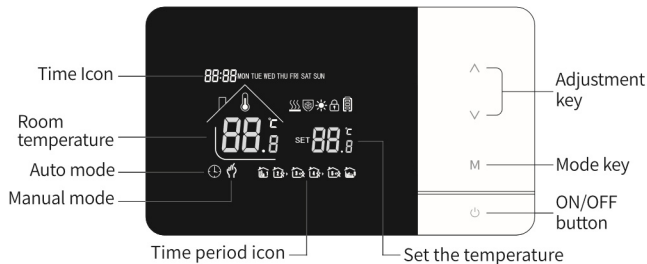

Operation Instruction

1.Power on/off

Press  to turn on/off the thermostat .

2.Set Temperature

Press  or  to set the temperature.

3.Switch modes

Press **M** key to switch between Manual and Auto mode

 Manual mode:means non-programmable mode.

The thermostat runs according to the temperature you set manually

 Auto mode: the thermostat will run automatically according to the programme you set up

  Temporary Mode: If the set temperature is manually adjusted while in automatic mode, the thermostat enters temporary mode.It will run according to your manual settings and resume programming mode at the next programming time point

4.Set the Child Lock

Simultaneously press  and  for 5 seconds to add or cancel the child lock

Advanced Option Setting

In **power-on** state, long press **M** to enter advanced setting. Press $\wedge$ or $\vee$ to select the parameter to be adjusted, press **M** to enter, press $\wedge$ or $\vee$ to select the required parameter, press **M** to confirm and exit.

Display	Function	Setting And Options	Default	
Mod	select heating or cooling mode	 heating  cooling	 heating	press M to enter, press $\wedge$ or $\vee$ to select the required parameter, press M to confirm and exit.
SEr	press M to enter advanced option setting			
1	temperature calibration	-9.9°C~+9.9°C	0°C	press $\wedge$ or $\vee$ to select the required parameter, press M to confirm and exit.
	Calibration when the room temperature displayed by the thermostat does not match the actual room temperature			

2	temperature hysteresis	0.5°C~10°C	1°C	press $\wedge$ or $\vee$ to select the required parameter,press to confirm and exit.
	When 1° C is selected and the set temp. is 21° C, the thermostat will start heating when the room temp. is 20° C and stop heating when the room temp.reaches 22° C (the opposite is true for cooling).			
3	frost protection	ON:turn on this function OFF:turn off this function	ON	press $\wedge$ or $\vee$ to select the required parameter,press to confirm and exit.
4	Max value of set temp.	15°C~60°C	35°C	
5	key sound	ON:turn on OFF:turn off	ON	
6	Reset		-	long press M key until thermostat shows “--- “ and the reset is complete.

	Daily programme schedule time points and temperature settings Refer to the Daliy programmable section for more information on how to do this.
	Adjustment of clocks and days of the week Press  or  to adjust when the character jumps, press M to switch between minutes, hours and days of the week.

Daily Programmable

You can set different temperature changes for each day of the week to fit your schedule. The room temperature will change automatically when Auto Mode is turned on.

There are 6 individually programmable periods for each day of the 7-day week.

We've built in a default 7-day programming for you (the table on the right), you can change the settings directly on the thermostat or in the app.

Default Programming

	Period	Temperature
 1	06:00	20°C
 2 >	08:00	16°C
 3 <	11:30	16°C
 4 >	12:30	16°C
 5 <	17:00	22°C
 6	22:00	16°C



23:59

Please note: the latest time to set the setting is 23:59


Modify the programming on the thermostat:

1 Enter the high level settings

In the on state, press and hold the M button until the word “Nod” appears on the screen.


2 Select “programming”

Tap the up and down buttons to switch between programs until the word “Pro” (short for Program) appears.

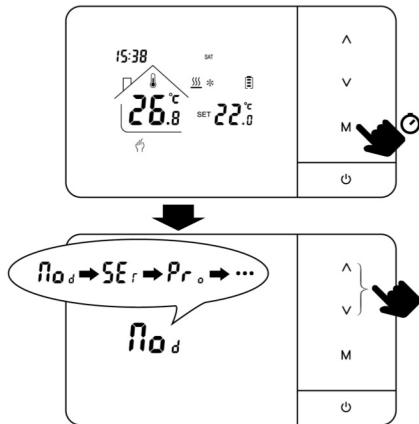


3 Enter “programming”

Tap the M button to enter daily programming.

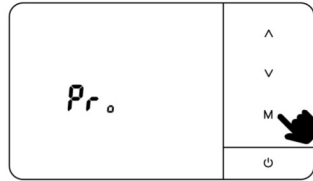

4 Select the day of the week

The screen displays “Mon”, i.e. Monday. Press the up and down keys to change the day of the week.

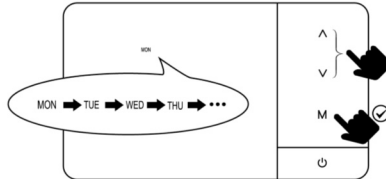


Tap the M key to confirm and enter the start time modification.

5 *Modifying the Start Time*

Tap the up and down keys to modify the start time of the period.


Tap the M button to confirm and enter the modification of the temperature for the time period.

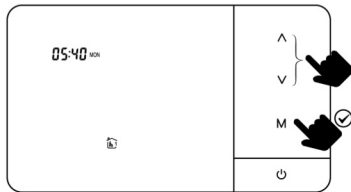

6 *Modifying the Temperature*


Tap the up and down keys to change the temperature of the period.

Tap the M key to confirm and go to the modification of the start time of the next time period.

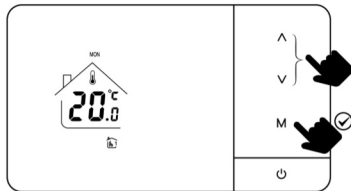

7 *Modify the start time of the next time period*

Continue in this way until the 6 time periods of the day have been set. Tap M to confirm and you can enter the next day's setting until all 7 days are set.

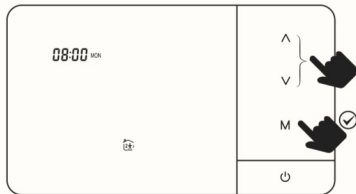

8 *Final confirmation and exit*

After all 7 days have been set, press the On/Off button to confirm and exit the advanced settings.

